

# Tire Valve Installer

## 9BK31

- Use for replacement and fitting tire valves
- Composite body prevents damage onto alloy wheel
- 180 degree pivoting head
- 310mm plastic handle



- For removal & installing valve cores



9BK31  
118.0 12 / 144



 
9BK32  
353.0 6 / 48



# Tire Lever

## 9BK41

- Professional quality
- Straight pattern with profiled shank




KT NO.	L		A mm	B mm	Kg	Crate
	inch	mm				
9BK41-20	8	200	21.6	11	104.4	10 / 120
9BK41-28	11	280	22.7	13.5	239.4	10 / 50
9BK41-38	15	380	24.5	13.5	358.0	10 / 50
9BK41-53	21	530	28	12	928.0	10 / 20

## 9BK41-73

new

- To install and remove the tubeless tire from wheel rim
- Precision forged with greater leverage design
- Special design for 17" to 22.5" tire

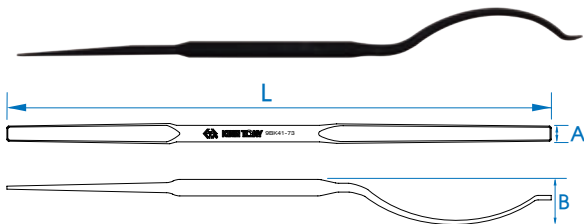

KT NO.	L		A (mm)	B (mm)	Kg	Crate
	inch	mm				
9BK41-73	28-3/4	730	22	64.4	1618	1 / 10

# TPMS Torque Assist Tool Set

## 9BK51

- Use to install/change TPMS sensor and tyre valve
- Rotary slide bar design avoids tightening with overloaded torque
- Torque screwdriver with  $\pm 5\%$  tolerance
- Quality meets DIN ISO 6789 & ASME B107.300-2010

### • Contents:

- 2033
- 1/4"DR x T10, T15, T20 torx bit socket
- 2235M
- 1/4"DR x 11, 12, 13mm deep socket
- 2221-02
- 1/4"DR x 2" extension bar
- 2752-45G
- 1/4"DR. T handle swivel head reversible ratchet
- 34101-040M
- Valve core torque tool (0.45N.m)
- 341214M
- 1/4"DR. Preset torque T-DRIVER (1.4 N.m)
- 34211-3DG
- 1/4"DR. Torque Screwdriver (4~9 N.m)

1.53 1 / 10



11 PC.



Correct instruction should take the manual as reference